



Nikon Coolpix S6800 Battery Replacement

Replacing the battery in your Nikon Coolpix S6800 camera to allow it to be turned on. Alternatively, removing the battery in your Nikon Coolpix S6800 to begin repairs.

Written By: sam ford



INTRODUCTION

Replacing/ removing the battery is an essential first step when making any repairs to your camera.

Step 1 — Battery




- Open the battery cover by lightly pushing on the cover and sliding it forward

Step 2



- Slide the yellow holding tab toward the back face of the camera

Step 3

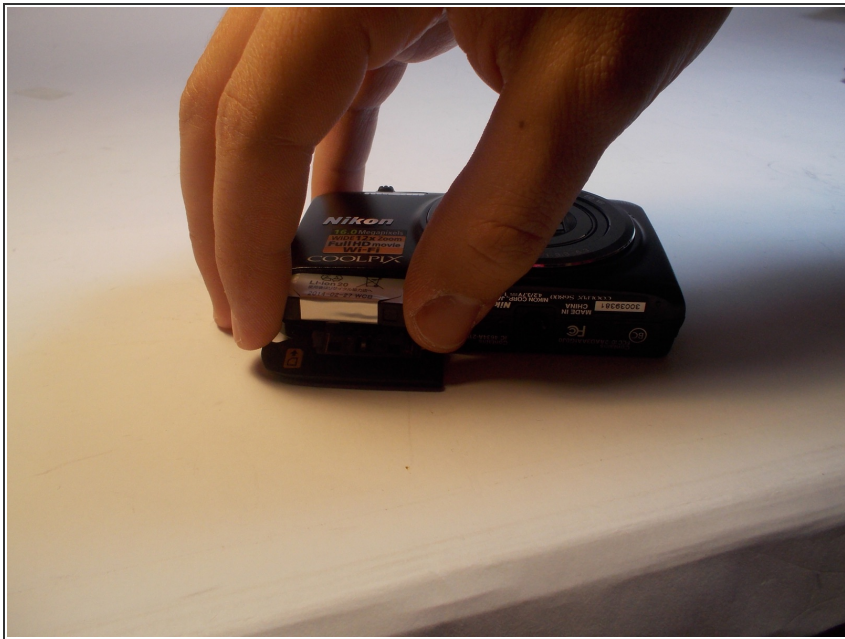

- Remove the battery

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-30 10:47:53 PM.